



Conduit Maximization Solutions

Re-Spooling Instructions

To ensure proper re-spooling and storage of MaxCell, follow these steps. If you have any questions, please contact MaxCell inside sales representatives at 1.888.387.3828.

1. Operator must maintain an even and consistent flow of the product across the new reel by traversing the MaxCell back and forth all the way to each of the reel flanges.



2. Operator must verify that the cells of MaxCell are flat. Open or twisted cells will cause quality issues during installation. If cells begin to open stop the process, reverse the direction and fix the defect. Operator must keep track of the footage markers showing on the product. There is a -0/+<1ft quantity tolerance on all orders.




3. Re-spooled MaxCell should always be covered with a shrink wrap product, preferably a UV rated shrink wrap such as what is provided on original product reels. Once operator is finished with the re-spool, they are to pull enough slack off the stretch wrap roll to reach the spool and tie a knot around the MaxCell.



4. Hold the stretch wrap and place at least two layers of wrap on finished reel.



5. When finished, cut wrap from stretch wrap roll and press smooth onto reel. Secure with tape.

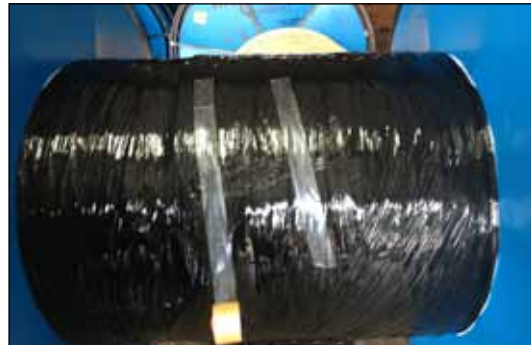

6. Print an unwind label as seen at right and place on the reel in the correct direction.

